Troubleshooting

The load will not switch on with the CEFLPHRE

• The manual wall switch must be turned off for about 5 seconds and back on again to reset the photocell.

The load switches on and off every minute with the CEFLPH

• Too much artificial light is entering the photocell.

The lights switch on too early, when it is light enough in the room.

• Rotate the LUX adjuster further clockwise, towards '-'.

The lights switch on too late, when it is already dark in the room.

· Rotate the LUX adjuster further anti-clockwise, towards '+'.

Precautions and Warranty

This product conforms to BS EN 60669-2-1.

Please ensure the most recent edition of the appropriate local wiring regulations are observed and suitable protection is provided e.g. 6 amps over current, 1kV over voltage. Please ensure that this device is disconnected from the supply if an insulation test is made.

This product is covered by a warranty which extends to 5 years from the date of manufacture.

Products available from DANLERS

- PIR occupancy switches
 Daylight linked dimmers
 Manual high frequency dimmers
- Photocells Radio remote controls Time lag switches Outdoor security switches
- Dimmers Heating, ventilation and air-conditioning controls Bespoke / O.E.M. products

Please call for more information or a free catalogue, or visit our website.

DANLERS Limited, Vincients Road, CHIPPENHAM, Wiltshire, SN14 6NQ, UK. Telephone: +44 (0)1249 443377 Fax: +44 (0)1249 443388 E-mail: sales@danlers.co.uk Web: www.danlers.co.uk Company Registered Number 2570169 VAT Registration Number 543 5491 38



DANLERS

Installation notes

Ceiling flush photocell switches

CEFLPH CEFLPHRE

DANLERS ceiling flush photocell switches can be flush mounted into suspended and plasterboard ceilings (diagram A). They include a 2 metre connecting flex to make installation quicker and easier.

When the ambient light level falls below the LUX threshold the photocell will switch the connected load on. It will switch the lights off again when the light level raises to approximately twice the LUX threshold, to avoid the possibility of 'hunting'.

The LUX threshold can be set by the user to between approximately 100 and 1000 lux at the work surface by the LUX adjuster (diagram C). There is also an infinite lux setting where the lights will be switched on constantly.

There is a time delay of approximately a minute before switching actually occurs, to avoid nuisance short term switching caused by a passing cloud etc. A small red LED changes state as soon as the LUX threshold is traversed to make set up easier.

The CEFLPH product will switch the lights on and off without user intervention. However with the CEFLPHRE, reset version, the load will only switch on again once a manual wall switch (wired before the photocell, diagram B) is switched off (for 5 seconds) and on again.

Each time the manual wall switch (wired before either type of photocell) is switched, the lamp will switch on for 1 minute regardless of the ambient lux level.

Loading

These Photocell switches can switch up to 6 amps (1500W) of:

- · Fluorescent lamps, high frequency or switch start
- Incandescent or mains halogen lamps (recommended with integral safety fuse)
- · Electronic or wire wound transformers.

They can also switch up to:

- 2 amps (500W) of CFL, LED Drivers and LED lamps and fittings.
- 1 amp (250W) of fans or metal halide lamps.

INS930 CEFLPH

Installation procedure

- 1. Please read these notes carefully before commencing work. In case of doubt please consult a qualified electrician.
- 2. Make sure the power is isolated from the circuit.

 
The Photocell should be connected as shown in diagram B:

- Brown L Live in
- Blue N Neutral in
- Black SL Switched Line out


Lux set-up

The LUX is best set up when it is dark outside and the lights are on. To do this turn the LUX control fully clockwise to '-' then slowly anticlockwise (towards '+') until the red LED turns off.

A: Mounting diagram



B: Wiring diagram

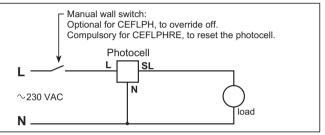

C: Adjusting Lux

