Installation & Wiring Instructions NDA/3 DALI Self-Test Conversion Kit



PLEASE READ THESE INSTRUCTIONS BEFORE COMMENCING INSTALLATION & LEAVE WITH END USER


Description:

The Liteplan NDA/3 DALI self-test emergency lighting modules are designed to convert a wide range of LED types with two versions. The NDA/3 is the popular choice for converting most standard LED luminaires and arrays containing from 2 to 20 LEDs in series, whilst the NDA/3/80 extends the range by converting from 2 to 30 LED's in series. The modules are designed to be installed by breaking into the low voltage connection between the mains LED Driver and the LEDs and allows the LEDs to be operated as normal under mains healthy conditions and operated at reduced light output in an emergency.

The module automatically adjusts the output LED current to provide the best match between the battery and the load, providing maximum illumination whilst ensuring full battery duration and are compatible with a wide range of lighting.

Specification:

Input Voltage	230-240 Volts AC 50/60 Hz
Input Current & PF	$26mA - \lambda = 0.88$
Duration	3 hours
Ambient Temp.	0°C to + 50°C
Max Case Temperature	70°C
Max Battery Temperature	55°C
Terminal Blocks	0.5-1.5mm ² Screw
Battery Fuse	Internal
Battery Discharge Current	1000mA ± 150mA
Discharge Voltage Limit	2.5V
Ingress Protection	IP20
Battery Pack	3.6V 4.5Ah NiCd
Charge Current	200mA ± 50mA
Recharge Period	24 Hours
Module Size (L x W x H)	165mm x 45mm x 29mm
Module Fixing Centers	155mm
Module Weight	0.29Kg
Battery Weight	0.40Kg
Battery Dimensions	220mm x 38mm diameter
Insulation between Supply	
& Battery	Double Reinforced

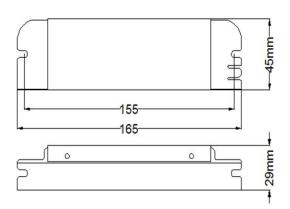

NDA/3

3W to 80W LEDs that operate in Voltage Range 6 - 55 Volts Open Circuit Voltage (U-OUT) = 60 Volts

NDA/3/80

3W to 80W LEDs that operate in Voltage Range 15 - 80 Volts Open Circuit Voltage (U-OUT) = 90 Volts

Warning

Avoid running the LED mains driver and emergency pack without the load connected. Failure to do so may result in damage to the LED array

Important

It is recommended that the module is installed by a competent person ensuring the installation complies with the necessary standards. Liteplan accept no responsibility for injury, damage or loss, which may arise as a result of incorrect installation, operation or maintenance.

The conversion requires an unswitched supply for charging the battery and a switched supply if the unit is being used for maintained operation.

ISOLATE BOTH MAINS SUPPLIES AND DISCONNECT THE BATTERY BEFORE INSTALLATION OR MAINTENANCE.

Installation

Tel +44 (0)1708 372223 | www.liteplan.com | customerservice@liteplan.com | RM3 0AP. UK

When converting a luminaire observe the following points:-

- Fit the module & battery pack into the existing luminaire ensuring that they will operate within their temperature ratings.
- If the module & battery pack do not fit integrally, then a remote conversion can be used. Ensure that the interconnecting loom is kept as short as possible.
- 3. Wire the module & battery into the luminaire as per wiring diagram on Pg2.
- 4. Ensure that the Permanent Live & Switched Live feeds are connected correctly.
- 5. Ensure that the DALI pair is connected to the DALI operating system
- Arrange the wiring to avoid running the 240 Volt cables next to the modules output to the LED to obtain the best EMC results.
- 7. Requirements for 'F' markings must be observed.
- 8. Identify clearly the NEW Un-switched supply.
- 9. Ensure the LED Charge Indicator is clearly visible.
- If fitted within a metal enclosure, connect earth terminal to metal gear tray for improved EMC.
- This module is not intended for use in luminaires for high-risk task area lighting.
- 12. This module is protected against battery polarity reversal.


Liteplan reserve the right to change colour, price or specification without prior notice

Installation & Wiring Instructions NDA/3 DALI Self-Test Conversion Kit



PLEASE READ THESE INSTRUCTIONS BEFORE COMMENCING INSTALLATION & LEAVE WITH END USER

Typical Conversion Wiring Diagram

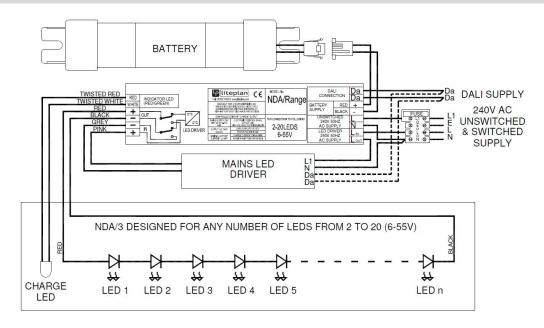

Device Status Indicator:

Green Solid		Battery connected & charging	Red Fast Flash 2 x 0.5 sec On, 2.5 sec Off	Lamp Fault
Green Fast Flash	,	Function Test in progress	Red Slow Flash 0.5 sec On, 3.5 sec Off	Battery Fault
Green Slow Flash		Duration Test in progress	Red / Green Alternating	Identification Mode
			Red & Green Off	In Emergency Mode

Luminaire Ref/Location				In Case of difficulty, contact the Installation Engineers:-							
				Tel:							
Full Recharge Time 24 Hours				Duration 3 Hours				Lamp Type - LED			
ROUTINE TEST RECORD											
	Year	1		Year 2 Year 3		Year 4		Year 5			
Monthly Test	Signed	Date	Si	gned	Date	Signed	Date	Signed	Date	Signed	Date
Functional											
Functional											
Functional											
Functional											
Functional											
Functional											
Functional											
Functional											
Functional											
Functional											
Functional											
Three Hour											

Tel +44 (0)1708 372223 | www.liteplan.com | customerservice@liteplan.com | RM3 0AP. UK

