

DANLERS

Installation notes

Variants

As DANLERS design and manufacture in the UK, variants can be supplied, coded by the following suffixes and applied in this order:

- 12V or 24V 12V or 24V (ac or dc) operation
- VF Volt Free contacts
- GOLD or LG Gold or Logic Gold contacts
- NC Normally Closed contacts

Variant details are covered in an enclosed addendum sheet if applicable.

Troubleshooting

The load will not switch on:

- The LUX adjuster is set too low and is inhibiting the switch.
- The SENS adjuster is set too low.
- The moving body is not emitting more IR than the background.
(Person wearing insulating clothing in a warm environment)
- Person is too far from the PIR switch, see detection diagram.
- Person is moving unusually slowly (perhaps when testing).

The load switches on when nobody is present:

- Heater causing infra-red variations in a small cold room.
Reduce the sensitivity adjuster or re-site the CESFPIR.
- Please contact DANLERS for further technical support.

Precautions and Warranty

This product conforms to BS EN 60669-2-1 and BS EN 55015.

Please ensure the most recent edition of the appropriate local wiring regulations are observed and suitable protection is provided e.g. a 10 amp circuit breaker and voltage surge protection. Please ensure that this device is disconnected from the supply if an insulation test is made.

This product is covered by a warranty which extends to 5 years from the date of manufacture.

Products available from DANLERS

- PIR occupancy switches • Daylight linked dimmers • Manual high frequency dimmers
- Photocells • Radio remote controls • Time lag switches • Outdoor security switches
- Dimmers • Heating, ventilation and air-conditioning controls • Bespoke / O.E.M. products

Please call for more information or a free catalogue, or visit our website.

DANLERS Limited, Vincients Road, CHIPPENHAM, Wiltshire, SN14 6NQ, UK.
Telephone: +44 (0)1249 443377 Fax: +44 (0)1249 443388
E-mail: sales@danlers.co.uk Web: www.danlers.co.uk
Company Registered Number 2570169 VAT Registration Number 543 5491 38



Ceiling Surface PIR occupancy switches

CESFPIR

DANLERS ceiling surface passive infra-red occupancy switches (CESFPIR) can be ceiling mounted on a square pattress box (DANLERS code: PABO).

The CESFPIR incorporates a passive infra-red quad sensor to detect movement of a warm body within its detection zone (diagram A) and a photocell to monitor the ambient light level.

Upon detecting movement, if the ambient light is dark enough, the CESFPIR will switch the load on. The ambient threshold can be set by the user to between approximately 30 lux and 1000 lux and maximum (photocell inactive) at the PIR via the LUX adjuster (diagram B).

If no more movement is detected within a pre-selected time, then the CESFPIR will switch the load off. This time lag can be set via the TIME adjuster to 10 seconds, 20 seconds, 40 seconds, 80 seconds, 2 minutes 30 seconds, 5 minutes, 10 minutes, 20 minutes or 40 minutes (diagram D).(diagram B).

CESF PIR also incorporates a sensitivity adjuster, labelled 'SENS', to reduce the range and sensitivity of detection (diagram B).

Loading

The switch should only be connected to a 230V 50Hz AC supply.

These PIR switches can switch up to:

6 amps (1500W) of resistive loads.

6 amps (1500W) of fluorescent loads.

3 amps (750W) of electronic and wire wound transformer loads.

2 amps (500W) of CFL, 2D lamps, LED Drivers and LED lamps and fittings.

1 amp (250W) of fans

Minimum load 2W resistive, suitable for most energy saving lamps, LEDs and emergency fittings.

Installation procedure

1. Please read these notes carefully before commencing work. In case of doubt please consult a qualified electrician.
2. **POSITIONING:** The CESFPIR should be installed to achieve correct coverage of the area, see diagram A. If the photocell override facility is required, the switch must be located above an area where daylight can give greater illumination than the artificial light. Avoid locating this product where it is exposed to windy or drafty conditions (exposed lobbies, open ceiling voids or near ventilation fans) or near heat sources. To cover large areas CESFPIRs should be spaced in a 5 metre grid formation.
3. The greatest energy savings will be made if each CESFPIR controls an independent set of lamps. They can be wired in parallel but this should ideally be limited to three, see diagram D.
4. Make sure the power is isolated from the circuit. The CESFPIR should be connected as shown in diagrams C & D:
L - Live in. N - Neutral in. SL - Switched Line out.

Start-up mode

When the CESFPIR is powered up, it will switch on the load for 1 minute, the load will then switch off and the CESFPIR will enter its Operating Mode. If a manual override-off switch is positioned before the CESFPIRs in the circuit (diagrams C & D, note 1) it will do this each time the wall switch is switched on. Alternatively, if the wall switch is placed after the PIR (diagrams C & D, note 2) it will not enter the start-up mode each time.


Time, Lux & Sensitivity Set-up

For convenience, ensure that the TIME is set to the minimum when setting up the LUX level. Afterwards set the TIME to a value suitable for the application, making reference to diagram B.


The LUX is best set up when the local ambient light is at approximately the minimum desired working light level, a lux meter placed on the surface under the CESFPIR may help. With the LUX set fully clockwise wait for the CESFPIR to switch off. Rotate the LUX adjuster slowly anticlockwise (- to +), whilst waving your hand approximately 1m below the PIR, until the load switches on.

Turn the SENS adjuster fully clockwise for maximum range and sensitivity of the person detector. Turn anti-clockwise for reduced range and sensitivity.


A: Detection diagram

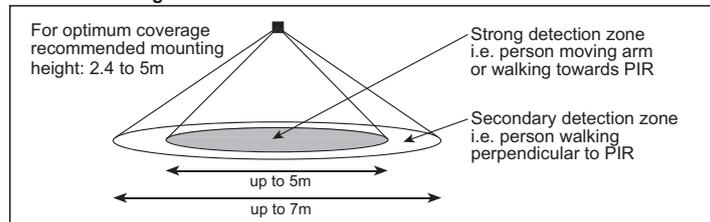

B: Adjusting time, lux and sensitivity

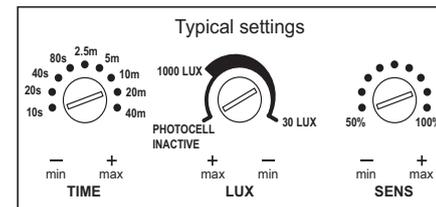

C: Wiring diagram, single PIR

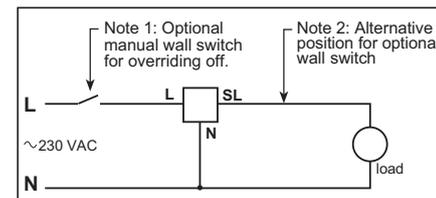

D: Wiring diagram, multiple PIRs

